

# MODCO 3 - 20X10

MODCO MODULAR EXHIBITS

PRODUCT CODE: MODCO3G-20x10G





On frame On graphic



FRONT



BACK

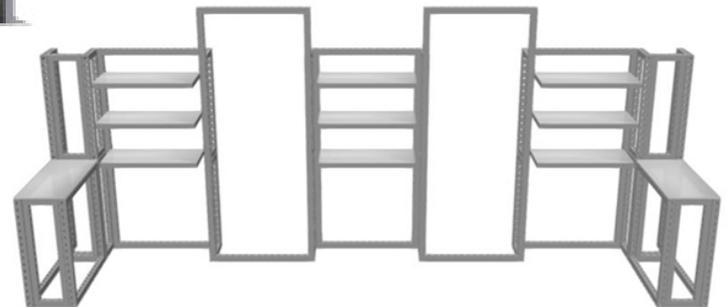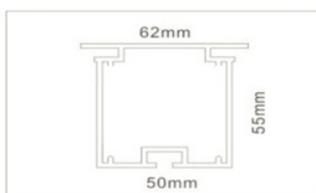

FRAME ONLY

## PRODUCT DESCRIPTION

Modco Modular Exhibits Modco 3 - 20x10 is a three-dimensional 20' x 10' pre-designed exhibit booth. Stylish and lively, Modco Modular Exhibits Modular 3 is built using tool-free perforated modular aluminum frames. Multiple size frames connect using simple toolless pin connectors. Use shelves to showcase your products. Customize double-sided stretch fabric SEG graphics for the entire exhibit. Perforations are completely covered for a flawless finish.

DISPLAY DIMENSIONS	234.3"W x 95"H x 44"D		
GRAPHIC SIZES	PANEL	SIZE	QTY
	A	40.125"W x 96.25"H	4
	B	40.125"W x 79.125"H	6
	C	13.25"W x 79.125"H	20
	D	40.125"W x 40.125"H	4
	E	13.25"W x 40.125"H	2
TOTAL PRINTS			36

## GRAPHIC MATERIAL

Dye Sub Fabric

## GRAPHIC FINISHING

Silicone beading is sewn around the perimeter of the fabric graphic. Silicone beading is hidden from view once installed.

## DISPLAY CONSTRUCTION

Aluminum frame and components

## SHIPPING WEIGHTS & DIMENSIONS (FREIGHT ONLY)

Shipping Weight	1415 lbs (frame & graphics in crate)
Shipping Dimensions	103"L x 44"W x 58"H (in crate)

## GRAPHIC TURN AROUND TIME


5 business days after proof approval

AVAILABILITY	CA only
--------------	---------


**expandbiz**

expandbizexhibits.com • Tel: 626-727-3716


## PARTS LIST

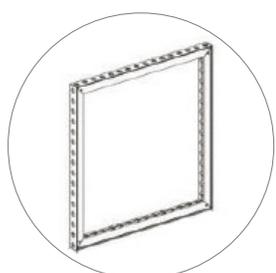


(qty 10)  
MOD-FRM-310x1984

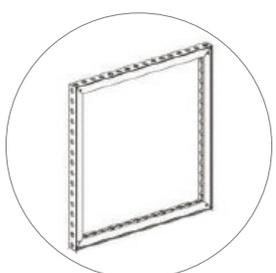


(qty 3)  
MOD-FRM-992x1984

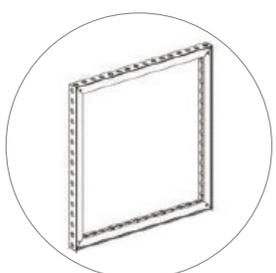


(qty 2)  
MOD-FRM-992x2418

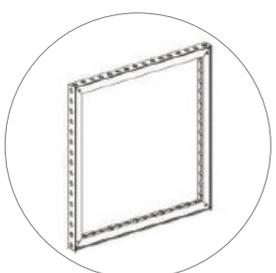

(qty 4)  
MOD-FRM-310x992

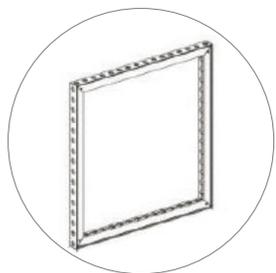


(qty 4)  
MOD-FRM-992x992

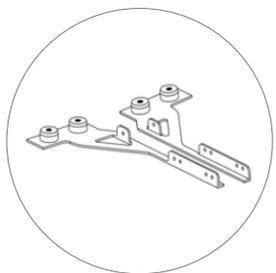

(qty 9)  
MOD-SHELF-KIT




(qty 24)  
MOD-90D-CON

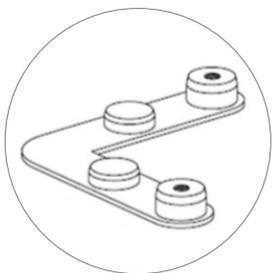


(qty 26)  
MOD-SM90D-CON



(qty 154)  
MOD-PC

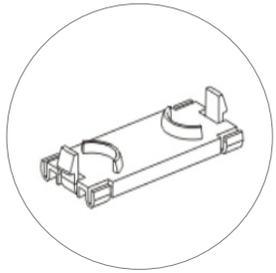

(qty 40)  
MOD-CC

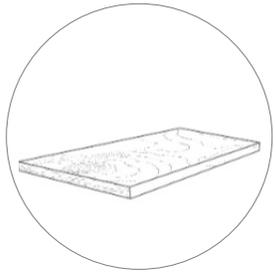

(qty 9)  
MOD-PNL (shelf)



(qty 2)  
MOD-PNL (counter)



(qty 8)  
78" MOD-CP-3100




(qty 8)  
39" MOD-CP-3100



(qty 4)  
17" MOD-CP-3100


## SET UP INSTRUCTIONS

### MODCO-3

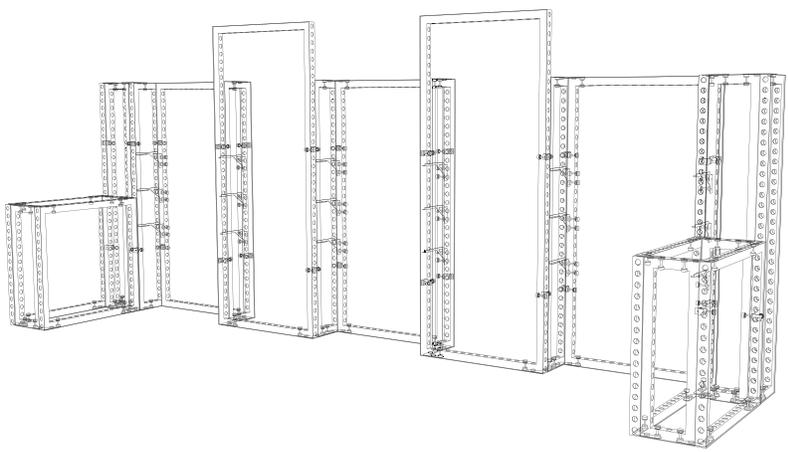

Instructions


### Parts / Frames

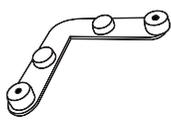


**Small 90° Connector**  
 MOD-SM90D-CON  
 Qty.12



**Pin Connector**  
 MOD-PC  
 Qty.62

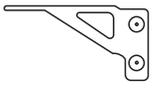

**Shelf Kit (left/right)**  
 MOD-SHELF-KIT  
 Qty.9 (pair)

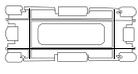

**Clip Connector**  
 MOD-CC  
 Qty.32



**90° Connector**  
 MOD-90D-CON  
 Qty.10




**17" Cover Profile**  
 MOD-CP-3100  
 Qty.4 - 17"




**39" Cover Profile**  
 MOD-CP-3100  
 Qty.8 - 39"



**78" Cover Profile**  
 MOD-CP-3100  
 Qty.8 - 78"

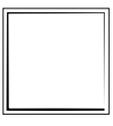

**992 x 992**  
 MOD-FRM-992x992  
 Qty.4

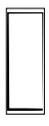

**312 x 992**  
 MOD-FRM-312x992  
 Qty.4



**312 x 1984**  
 MOD-FRM-312x1984  
 Qty.10



**992 x 1984**  
 MOD-FRM-992x1984  
 Qty.3




**992 x 1488**  
 MOD-FRM-992x2418  
 Qty.2




**Counter Shelves**  
 MOD-PNL  
 Qty.9

## Connections


**C**

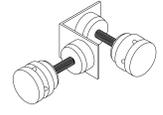


**MOD-90D-CON + MOD-PC**  
 Pin Connector heads remain on the inside of frames.

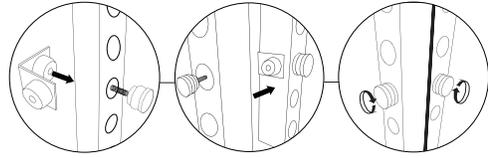


**D**

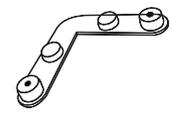


**MOD-SM90D-CON / MOD-PC**

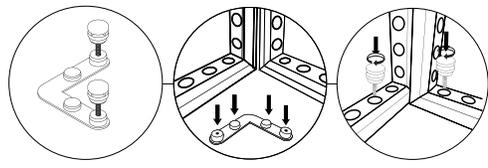


**E**

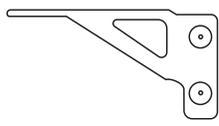


**MOD-SHELF-KIT**

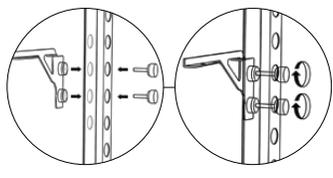


**F**

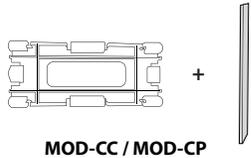

**MOD-CC / MOD-CP**


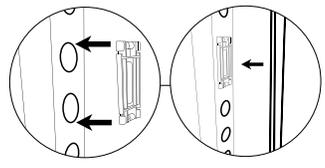


**1**

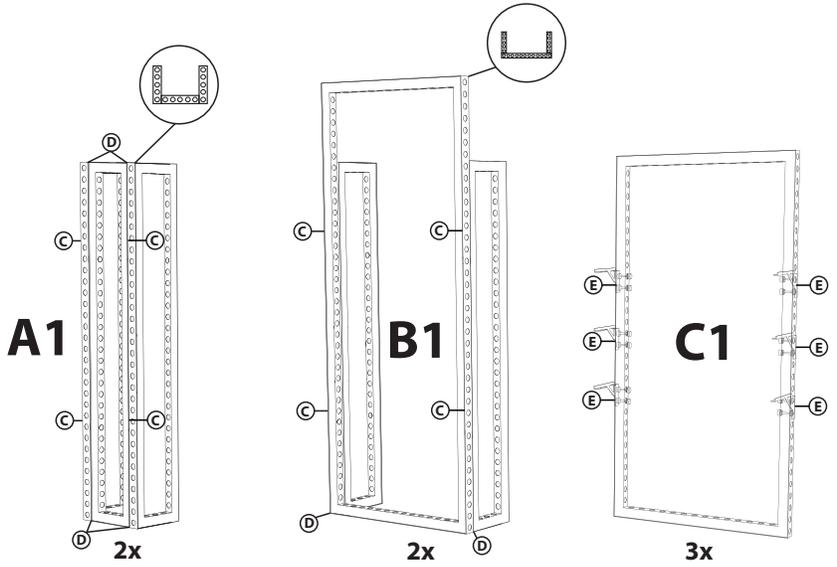


- Qty.10 - MOD-FRM-312x1984
- Qty.2 - MOD-FRM-992x2418
- Qty.3 - MOD-FRM-992x1984
- Qty.12 - MOD-SM90D-CON
- Qty.16 - MOD-90D-CON
- Qty.9 pair - MOD-SHELF-KIT
- Qty.92 - MOD-PC

2

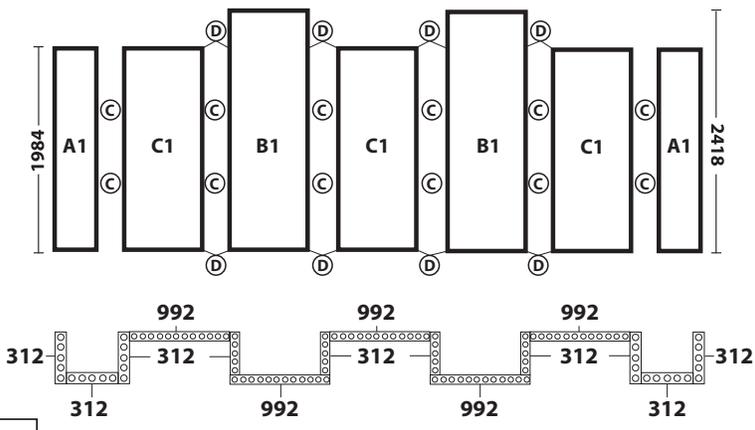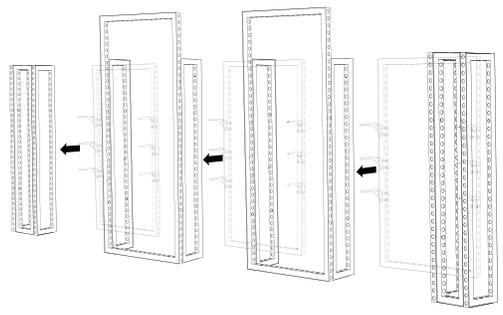

Qty.8 - MOD-SM90D-CON  
Qty.12 - MOD-90D-CON  
Qty.40 - MOD-PC


3

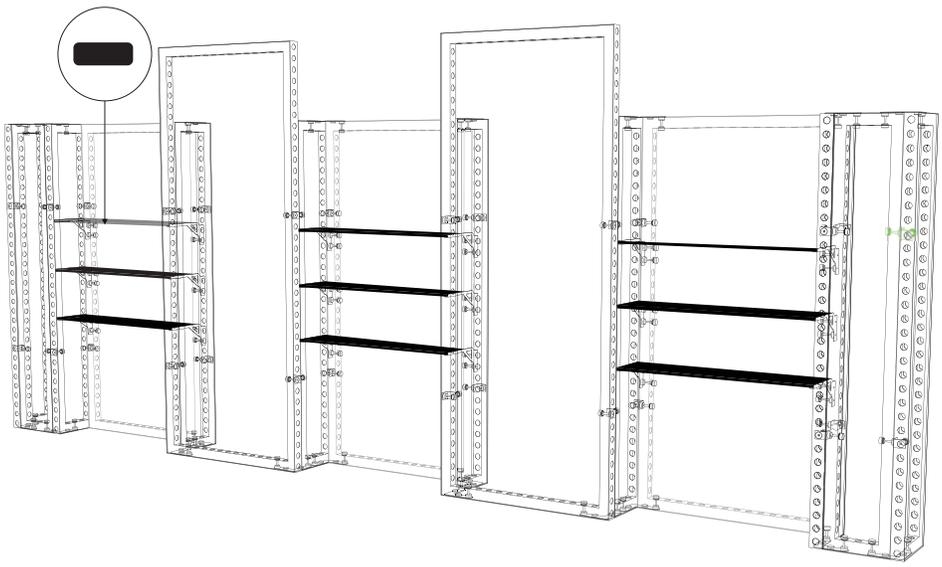

Qty.9 - MOD-PNL


Slide panels onto shelf brackets. NO DRILLING REQUIRED.

4

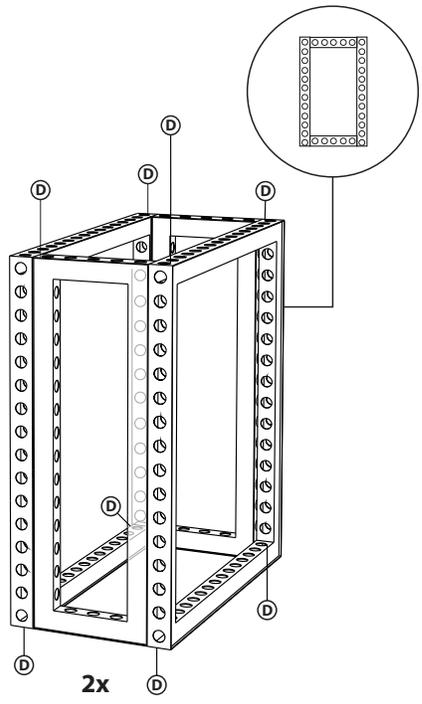


Qty.4 - MOD-FRM-312x992  
Qty.4 - MOD-FRM-992x992  
Qty.8 - MOD-SM90D-CON  
Qty.16 - MOD-PC

5

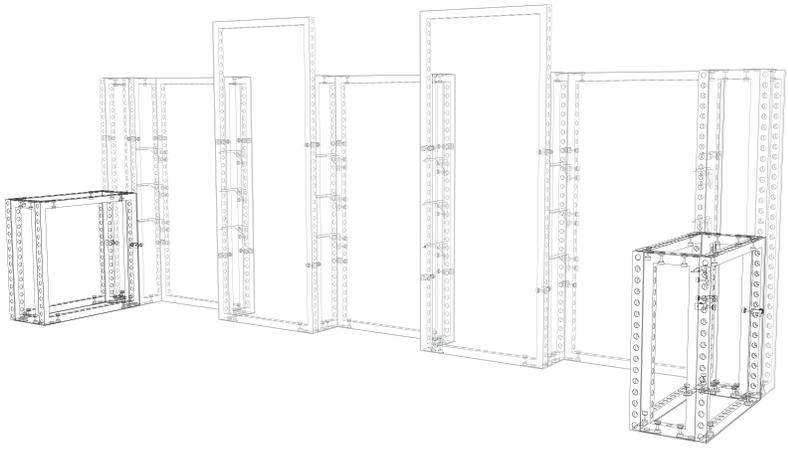

Counters are independent / DOES NOT ATTACH TO BACKWALL BOOTH.

## Cover Profiles

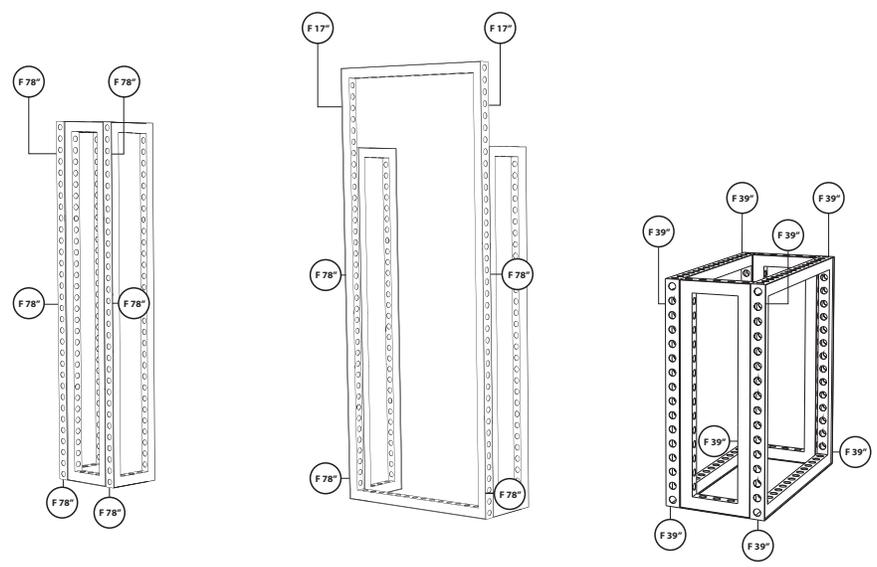

Qty.32 - MOD-CC  
Qty.4 - 39" MOD-CP-3100  
Qty.4 - 78" MOD-CP-3100  
Qty.4 - 95" MOD-CP-3100

Snap in clip connectors at each designated point and then reference the measurement and install the cover profile.


## Graphic Install




Place graphic over the front of the frame.



Begin inserting SEG beading at each corner.

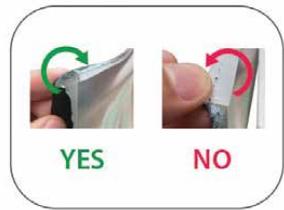

Insert the silicone beading with the fabric folded over. The silicone beading should not be exposed.

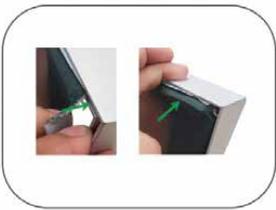

Using your fingers, push both fabric and silicone beading completely into the extrusions channel.



Continue to push in the remaining silicone beading on each side.



Check the perimeter of the frame for any excess beading that hasn't been pushed in. Graphic should be taut.